

T30 SERIES

LIGHT SWITCHES A NEW WAY TO EXPERIENCE DESIGN AND FUNCTION



1 gang 1 way switch
1 gang 2 way switch



2 gang 1 way switch
2 gang 2 way switch



3 gang 1 way switch
3 gang 2 way switch



4 gang 1 way switch
4 gang 2 way switch



Doorbell switch



1 gang 13A single pole
with neon
1 gang 13A double pole
with neon



1 gang 3 pin MF socket
with neon



1 gang 15A socket with
neon



1 gang 13A socket with
neon+2USB



1 gang 3 pin MF socket
with neon+2USB



1 gang 13A socket with
neon+USB+Type C



1 gang 3 pin MF socket+
USB+Type C



13A socket



3 pin MF socket



USB+Type C



1 gang 15A



1 gang 13A socket
with neon+USB+Type C



1 gang 3 pin MF socket



1 gang 5 pin MF socket
with neon



3 pin MF socket+2USB
+Type C



2 pin socket



1 gang with 2 pins socket



2 pin socket with TV



2 pin socket with TEL
2 pin socket with Int



5 pin MF socket



4 pins socket



1 gang with 4 pins socket



2 gang with 4 pins socket



TV socket



TEL socket
Computer socket



Double TV socket



TV+TEL socket
TV+computer socket



TEL+computer socket
Double TEL socket
Double computer socket



Satellite socket



Double satellite socket



Satellite+TV socket



Satellite+TEL socket
Satellite+computer socket



45A DP switch



25A DP switch



Touch switch



Voice switch



Dimming



1 gang + dimmer



1 gang+ Adjust speed



Adjust speed



European socket



Schuko socket



25A DP switch
45A DP switch



25A DP switch
45A DP switch



Human body induction



Blank plate



Blank plate(3*6)



Big panel 4gang



Big panel 6gang



Cooker unit



2gang 13A single pole with neon
2gang 13A double pole with neon



2gang 13A socket +USB+TYPE C
with neon



2 gang 3 pin MF socket



2 gang 3 pin MF socket with neon



2 gang 3 pin MF socket with neon+2USB



2 gang 3 pin MF socket+USB+Type C
with neon