

# T31 SERIES

LIGHT SWITCHES A NEW WAY TO EXPERIENCE DESIGN AND FUNCTION



1 gang 1 way switch  
1 gang 2 way switch



2 gang 1 way switch  
2 gang 2 way switch



3 gang 1 way switch  
3 gang 2 way switch



4 gang 1 way switch  
4 gang 2 way switch



Doorbell switch



Satellite+TV socket



Satellite+TEL socket  
Satellite+computer socket



45A DP switch



25A DP switch



Touch switch



1gang 13A single pole with neon  
1gang 13A double pole with neon



1 gang 3 pin MF socket with neon



1 gang 15A socket with neon



1 gang 13A socket with neon+2USB



1 gang 3 pin MF socket with neon+2USB



Voice switch



Dimming



1gang + dimmer



1 gang+ Adjust speed



Adjust speed



1 gang 13A socket with neon+USB+Type C



1 gang 3 pin MF socket+USB+Type C



13A socket



3 pin MF socket



USB+Type C



European socket



Schuko socket



25A DP switch  
45A DP switch



25A DP switch  
45A DP switch



Human body induction



1gang 15A



1 gang 13A socket with neon+USB+Type C



1 gang 3 pin MF socket



1 gang 5 pin MF socket with neon




3 pin MF socket+2USB+Type C



Blank plate



Blank plate(3\*6)

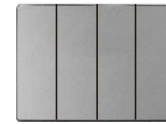

Big panel 4gang



Big panel 6gang



2 pin socket



1 gang with 2 pins socket



2 pin socket with TV



2 pin socket with TEL  
2 pin socket with Int



5 pin MF socket



Cooker unit



2gang 13A single pole with neon  
2gang 13A double pole with neon



2gang 13A socket +USB +TYPE C with neon



2 gang 3 pin MF socket



4 pins socket



1 gang with 4 pins socket



2 gang with 4 pins socket



TV socket



TEL socket  
Computer socket



2 gang 3 pin MF socket with neon



2 gang 3 pin MF socket with neon+2USB



2 gang 3 pin MF socket+USB+Type C with neon



Double TV socket



TV+TEL socket  
TV+computer socket



TEL+computer socket  
Double TEL socket  
Double computer socket



Satellite socket



Double satellite socket