

G70 SERIES



LIGHT SWITCHES A NEW WAY TO EXPERIENCE DESIGN AND FUNCTION




1 gang 1 way switch
1 gang 2 way switch

2 gang 1 way switch
2 gang 2 way switch

3 gang 1 way switch
3 gang 2 way switch

4 gang 1 way switch
4 gang 2 way switch

Doorbell switch

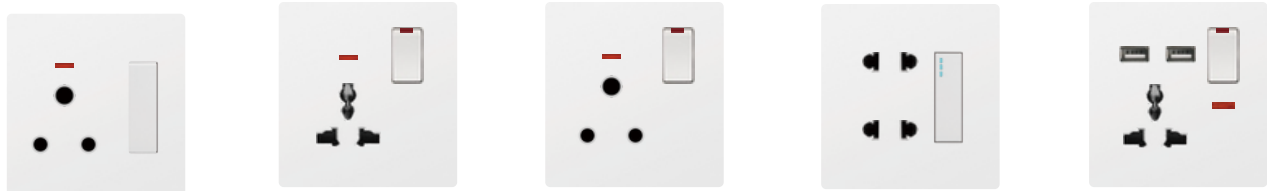


1gang 15A

1 gang 3 pin MF socket
with neon

1 gang 15A socket with
neon

1 gang with 4 pins socket

1 gang 3 pin MF socket
with neon+2USB

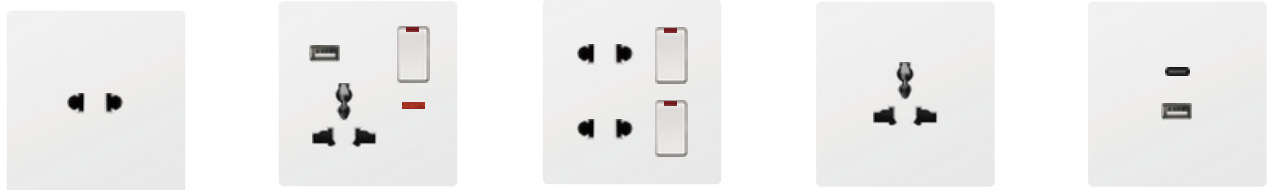

2 pin socket

1 gang 3 pin MF socket+
USB+Type C

2 gang with 4 pins socket

3 pin MF socket

USB+Type C




4 pins socket

1 gang 13A socket
with neon+USB+Type C

1 gang 3 pin MF socke

1 gang 5 pin MF socket
with neon

3 pin MF socket+2USB
+Type C

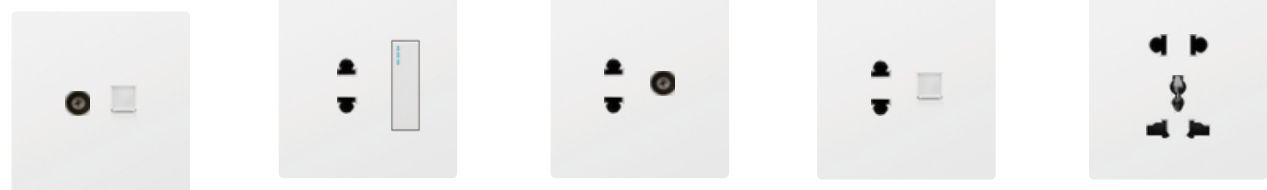


TV+TEL socket
TV+computer socket

1 gang with 2 pins socket

2 pin socket with TV

2 pin socket with TEL
2 pin socket with Int

5 pin MF socket

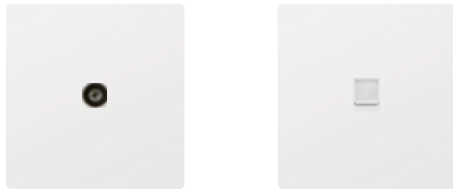

TV socket

TEL socket
Computer socket



Satellite+TV socket

Satellite+TEL socket
Satellite+computer socket

45A DP switch

25A DP switch

Touch switch




25A DP switch
45A DP switch

25A DP switch
45A DP switch

1gang + dimmer

1 gang+Adjust speed

Adjust speed

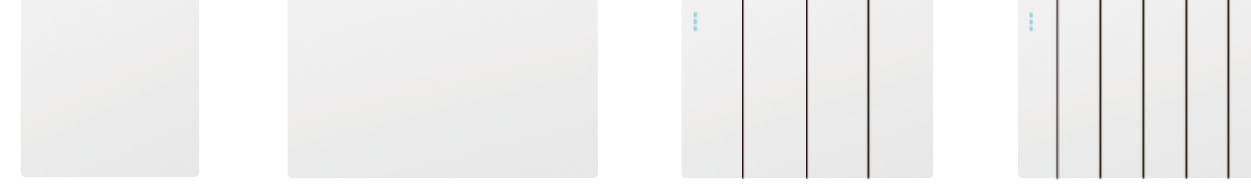

Blank plate

Blank plate(3*6)

Big panel 4gang

Big panel 6gang



2 gang 3 pin MF socket with neon

2 gang 3 pin MF socket with neon+2USB

2 gang 3 pin MF socket+USB+Type C
with neon

2 gang 3 pin MF socket with neon