

H14 SERIES



1 gang 1 way switch
1 gang 2 way switch



2 gang 1 way switch
2 gang 2 way switch



3 gang 1 way switch
3 gang 2 way switch



4 gang 1 way switch
4 gang 2 way switch



Doorbell switch



Satellite+TV socket




Satellite+TEL socket
Satellite+computer socket




45A DP switch



25A DP switch

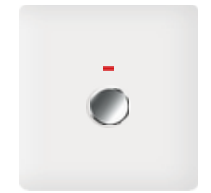


Touch switch

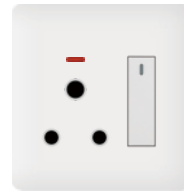


1gang 15A



1 gang 3 pin MF socket
with neon

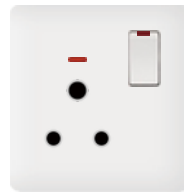


1 gang 15A socket with
neon

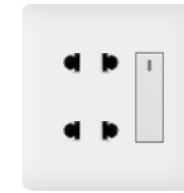

1 gang with 4 pins socket



1 gang 3 pin MF socket
with neon+2USB

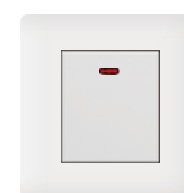

25A DP switch
45A DP switch



25A DP switch
45A DP switch



1gang + dimmer



1 gang+Adjust speed




Adjust speed




2 pin socket



1 gang 3 pin MF socket+
USB+Type C

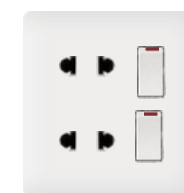

2 gang with 4 pins socket

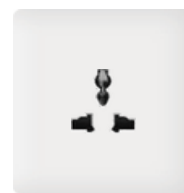


3 pin MF socket



USB+Type C



Blank plate

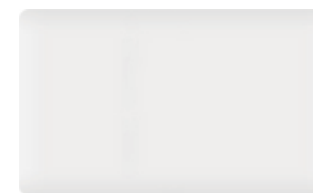


Blank plate(3*6)



Big panel 4gang



Big panel 6gang

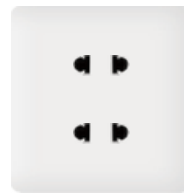


4 pins socket



1 gang 13A socket
with neon+USB+Type C




1 gang 3 pin MF socket

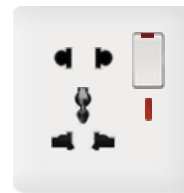


1 gang 5 pin MF socket
with neon



3 pin MF socket+2USB
+Type C

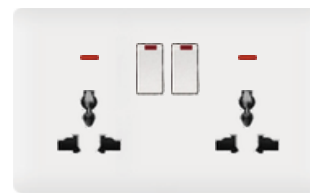


2 gang 3 pin MF socket with neon

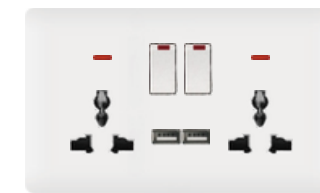


2 gang 3 pin MF socket with neon+2USB




2 gang 3 pin MF socket+USB+Type C
with neon

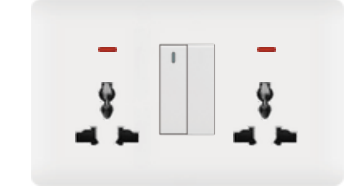

2 gang 3 pin MF socket

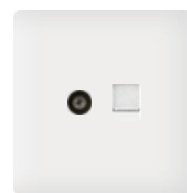

TV+TEL socket
TV+computer socket

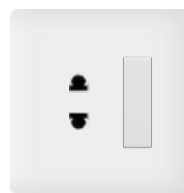

1 gang with 2 pins socket



2 pin socket with TV



2 pin socket with TEL
2 pin socket with Int



5 pin MF socket



TV socket



TEL socket
Computer socket