

T11 SERIES



1 gang 1 way switch
1 gang 2 way switch



2 gang 1 way switch
2 gang 2 way switch



3 gang 1 way switch
3 gang 2 way switch




4 gang 1 way switch
4 gang 2 way switch



Doorbell switch



Satellite+TV socket

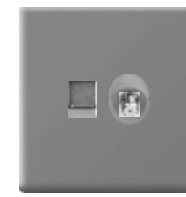

Satellite+TEL socket
Satellite+computer socket




45A DP switch



25A DP switch




Touch switch

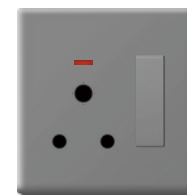


1gang 15A



1 gang 3 pin MF socket
with neon

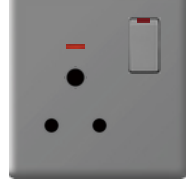

1 gang 15A socket with
neon

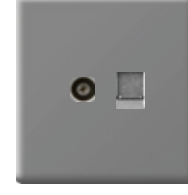

TV+TEL socket
TV+computer socket



1 gang 3 pin MF socket
with neon+2USB



25A DP switch
45A DP switch



25A DP switch
45A DP switch



1gang + dimmer



1 gang+Adjust speed




Adjust speed



2 pin socket



1 gang 3 pin MF socket+
USB+Type C

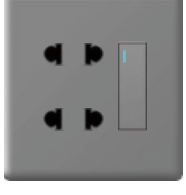

1 gang with 4 pins socket



3 pin MF socket



USB+Type C



Blank plate



Blank plate(3*6)



Big panel 4gang



Big panel 6gang



4 pins socket



1 gang 3 pin MF socket+
USB+Type C



1 gang 3 pin MF socket




1 gang 5 pin MF socket
with neon



3 pin MF socket+2USB
+Type C



2 gang 3 pin MF socket with
neon

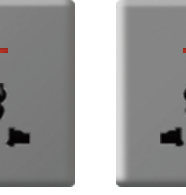


2 gang 3 pin MF socket with
neon+2USB



2 gang 3 pin MF socket+USB+
Type C



2 gang 3 pin MF socket with
neon

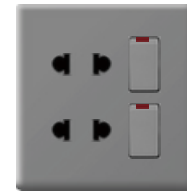

2 gang with 4 pins socket



1 gang with 2 pins socket



2 pin socket with TV



2 pin socket with TEL
2 pin socket with Int



5 pin MF socket



TV socket



TEL socket
Computer socket