

T13 SERIES

LIGHT SWITCHES A NEW WAY TO EXPERIENCE DESIGN AND FUNCTION



1 gang 1 way switch
1 gang 2 way switch



2 gang 1 way switch
2 gang 2 way switch




3 gang 1 way switch
3 gang 2 way switch



4 gang 1 way switch
4 gang 2 way switch




Doorbell switch

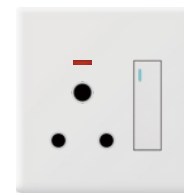

1gang 15A



1 gang 3 pin MF socket
with neon

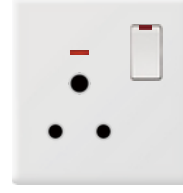

1 gang 15A socket with
neon



3 pin MF socket



1 gang 3 pin MF socket
with neon+2USB




2 pin socket



1 gang 3 pin MF socket+
USB+Type C



1 gang with 4 pins socket

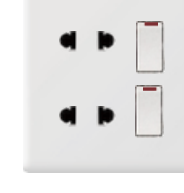

2 gang with 4 pins socket



USB+Type C




4 pins socket



1 gang 13A socket
with neon+USB+Type C



1 gang 3 pin MF socket

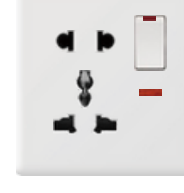

1 gang 5 pin MF socket
with neon



3 pin MF socket+2USB
+Type C



TV+TEL socket
TV+computer socket



1 gang with 2 pins socket



2 pin socket with TV



2 pin socket with TEL
2 pin socket with Int




5 pin MF socket



TV socket



TEL socket
Computer socket

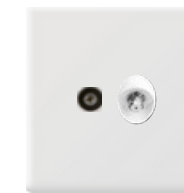

Satellite+TV socket



Satellite+TEL socket
Satellite+computer socket



45A DP switch



25A DP switch



Touch switch



25A DP switch
45A DP switch



25A DP switch
45A DP switch




1gang + dimmer



1 gang+Adjust speed



Adjust speed

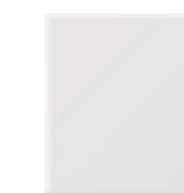

Blank plate



Blank plate(3*6)



Big panel 4gang



Big panel 6gang




2 gang 3 pin MF socket with neon



2 gang 3 pin MF socket with neon+2USB



2 gang 3 pin MF socket+USB+Type C
with neon

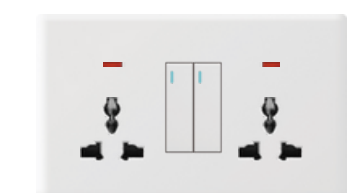

2 gang 3 pin MF socket with neon